



USER GUIDE

Numatic





NUC-244 NX

BRUSHES + FLOOR TOOL

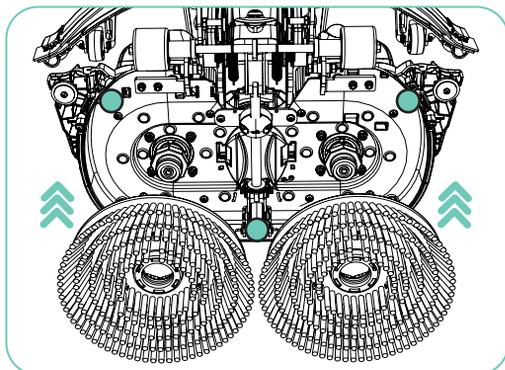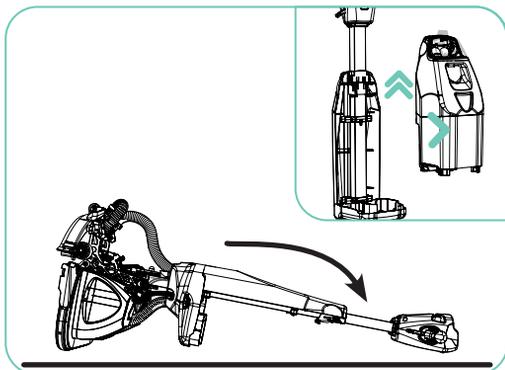


Remove the main tank and battery, gently lay the machine on its front. Push fit the brushes, clicking into place onto the motor chucks. To remove the brushes, place your fingers behind the brush deck in locations shown  and gently wiggle off.

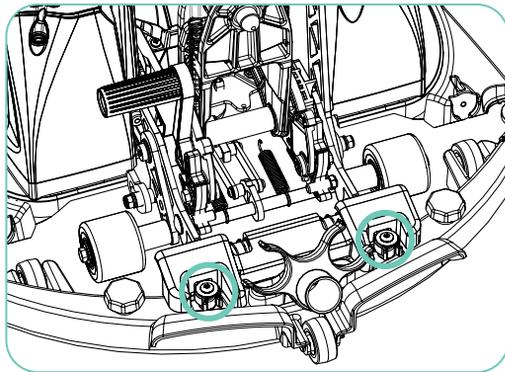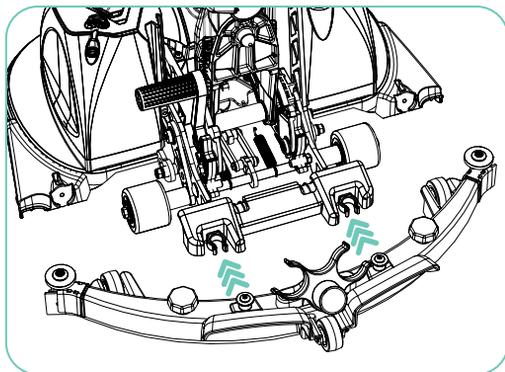


Push the floor tool carrier handle down, then mount the floor tool onto the retaining clips.


BATTERY + FILLING

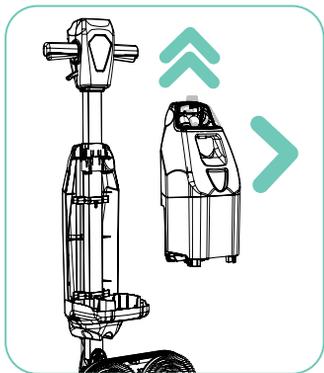


Remove the tank from the machine, using the inset handle.

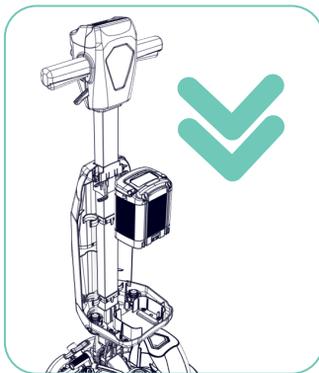


Lower the battery into place.

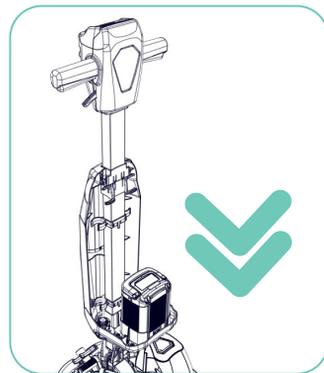


Ensure the battery is secure and fitted correctly.

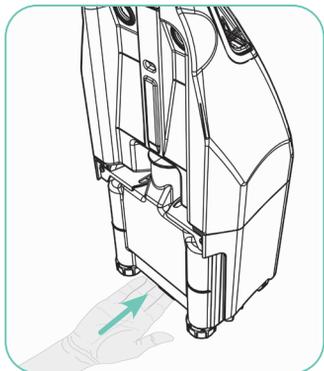

Tilt the tank assembly slightly forward and slide your hand under the tank.


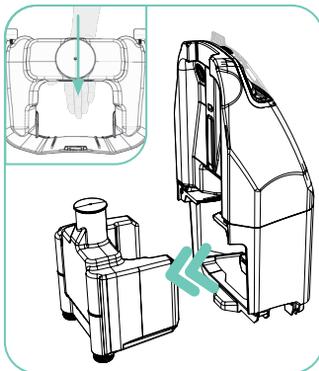


curl your fingers up in the space, use your fingers to pop the tank out. Remove the tank.

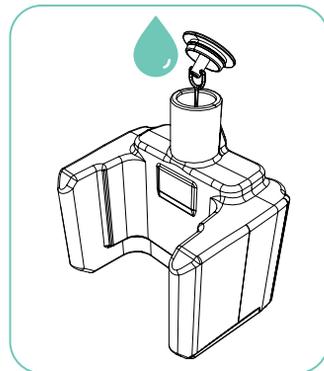


Lift the cap and fill with clean water.
NOTE: if adding chemicals refer to the manufactures dilution rates.


POWERING ON + START UP

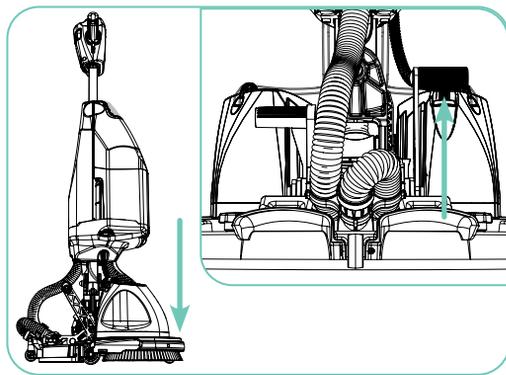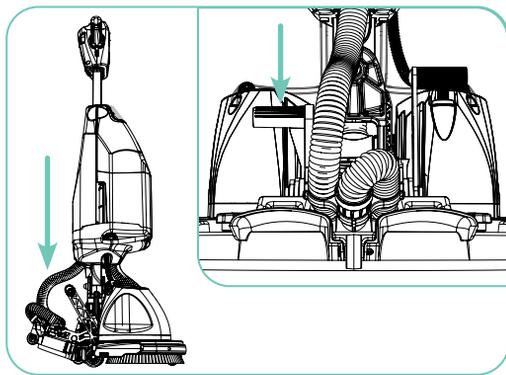

Lower the floor tool by pressing down on the left foot lever, lower the machine deck by pushing the right pedal forward.

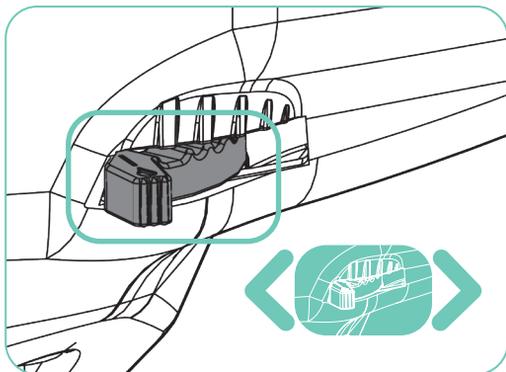


The dials on each side of the machine can be adjusted to set the water flow from the machine. Make sure they are both set the same

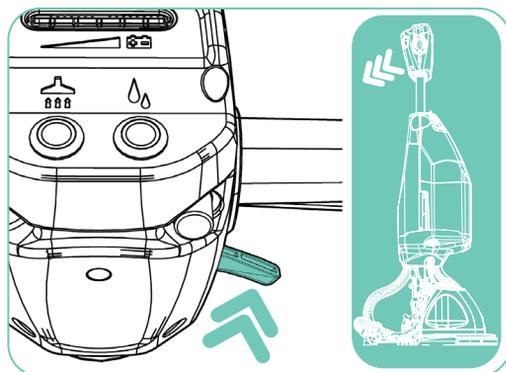


Standing behind the machine, pull the lever on the right hand side to lower the handle height.


POWERING ON
+ START UP

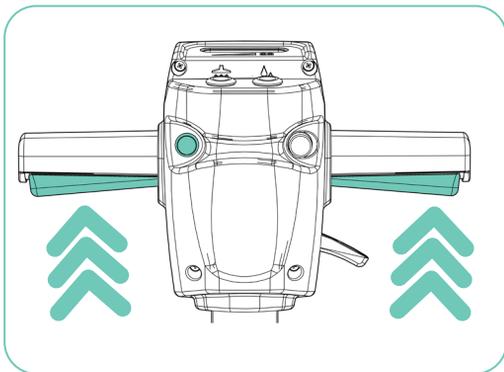

To start the machine pull both handle levers in and press the start button.

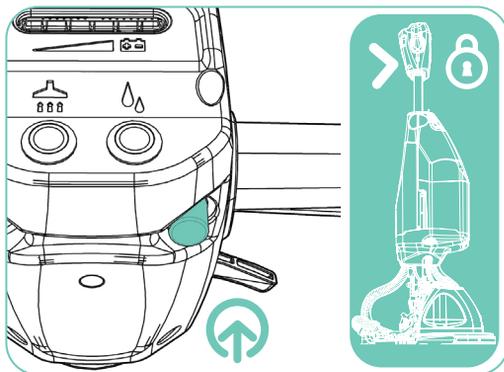


Use the button located at the rear for quick locking while in cleaning mode.

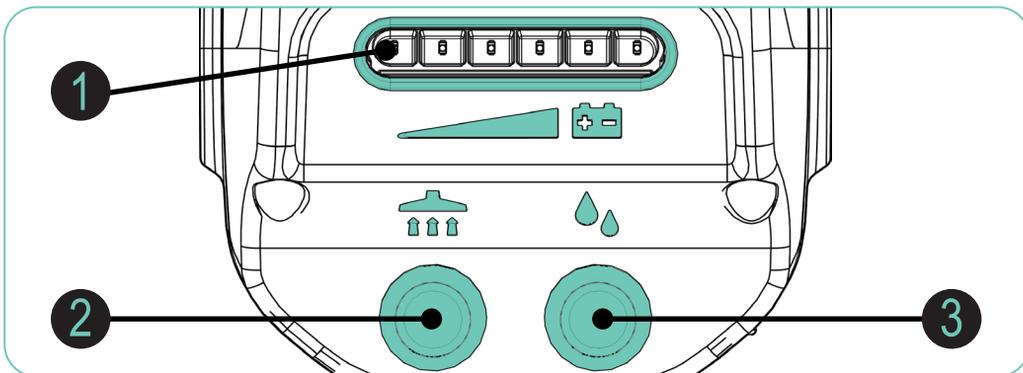


1 : BATTERY CHARGE LEVEL METER 2 : VACUUM ON / OFF SWITCH 3 : WATER FLOW ON / OFF SWITCH


EMPTYING +
MAINTENANCE

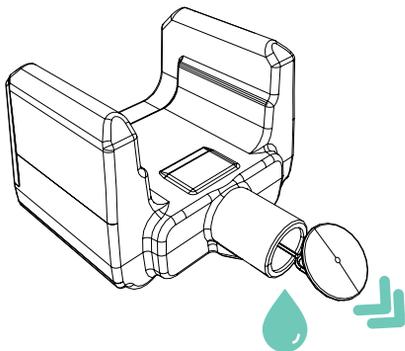


After each use empty any unused clean water.

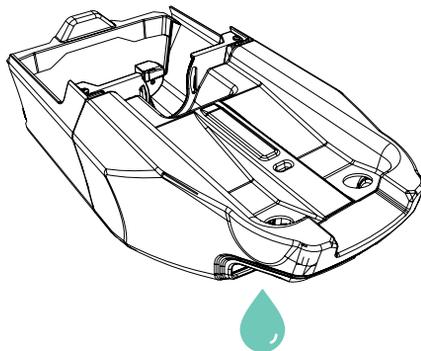

Empty the waste water tank when full / after each use.

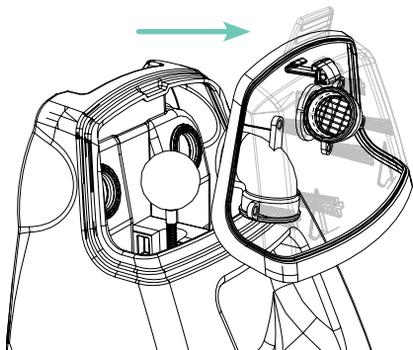


Clean the separator after each use.

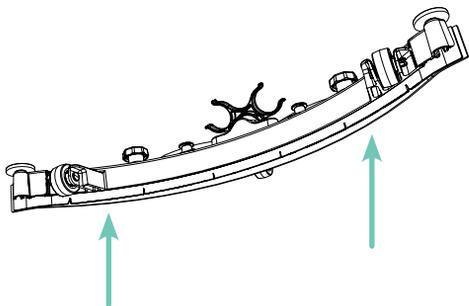


Clean the floor cleaning blades regularly.

STORAGE

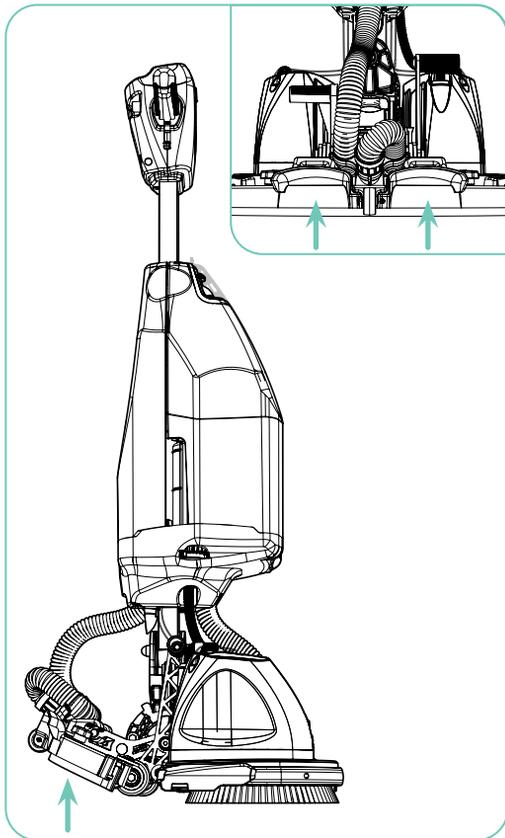


Raise floor-tool with your toecap.

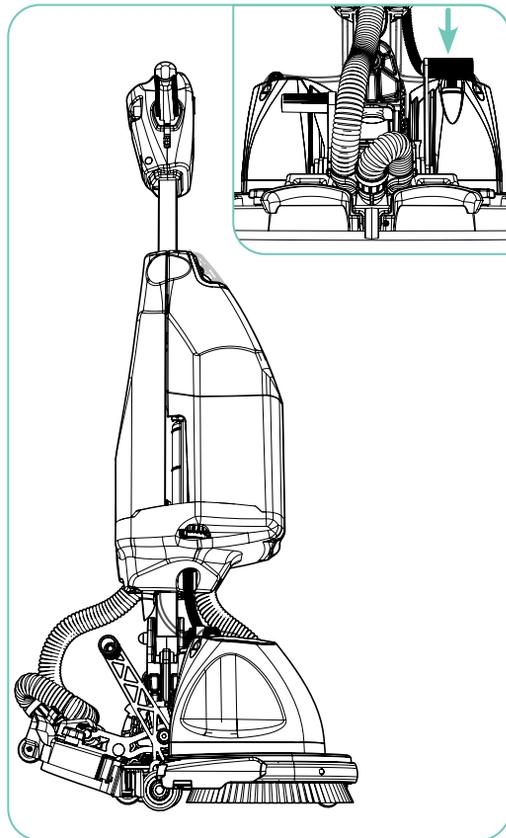

Press down on the foot pedal to raise the storage wheels.

BATTERY &
CHARGER

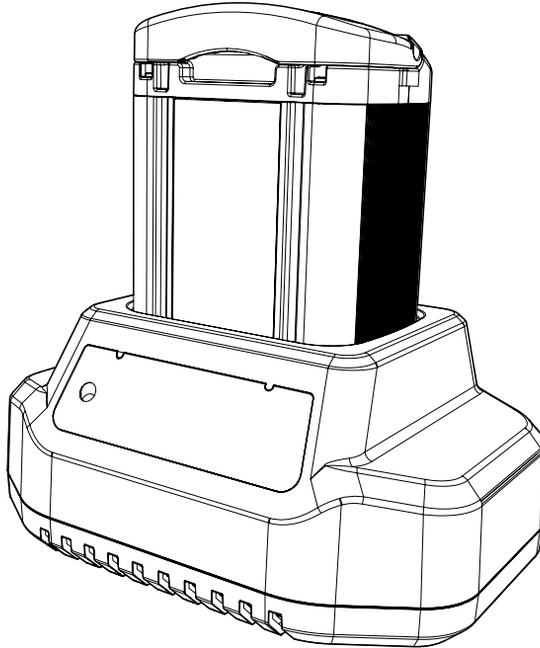

CHARGING INFO :
1hr to 80% charge
2hrs to 100% charge