


TBL6055 NX1K Operating Guide


Walk-behind Battery Scrubber Dryer

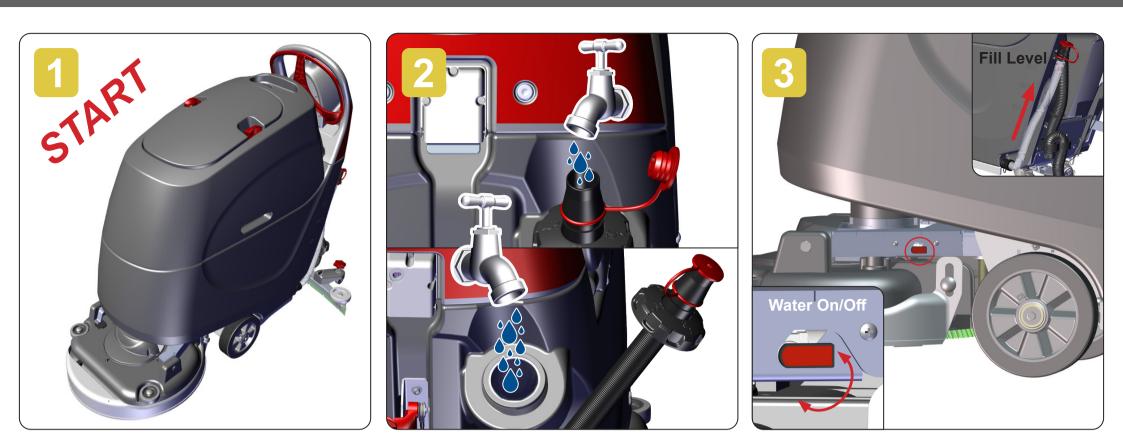

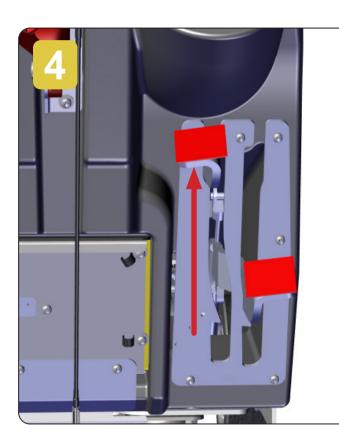

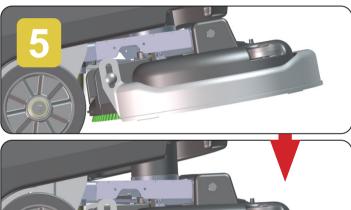




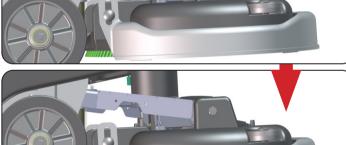





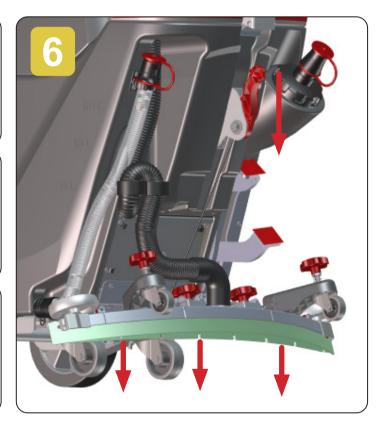

FloorCare



To start the machine, turn the key (1) then pull the start triggers (2) with the deck down, this will start the brush spinning.

With the machine running press the Water On/Off button and the Vacuum On/Off button as required.

Numatic.com





mumatic.com **(**+44 (0)1460 68600



©Numatic International Limited 2023. Specification subject to change without prior notice. numatic.com